

Titan Extruder Installation Steps



1. Use an Allen key to lock the extrusion wheel on the motor shaft. The motor shaft D section is in the same direction as the extrusion wheel locking hole.

2. Insert the L-shaped motor to fix the plastic parts. The four holes of the plastic parts are aligned with the four holes on the motor.

3. Put on the main frame of the Titan extruder and fix it on the two fixing holes shown by the red circle with two short screws.



4. Install the components in order of numbers in the figure.

5. Close the extruder cover and tighten the retaining nut.

(Note: The three screws are two long and one short, please install as shown in the figure)

